

ASSEMBLY INSTRUCTIONS

The wheelclamp requires no assembly, other than the placement of the protective foam to protect your wheel; this will need to be positioned appropriately after you have tried the wheelclamp on your caravan/vehicle.



1. Remove wheelclamp from storage step.
2. Slide the Milenco front cover with top strap over the wheel in a horizontal position, avoiding the wheel arch of the vehicle.



3. Rotate so that the top strap is over the centre of the wheel.
4. Insert the right leg through the right side of the front cover, ensuring the rear leg goes behind the tyre.
5. Insert the key and release the lock by rotating the key 90 degrees clockwise.



6. Insert left leg through the left side of the front cover. (Note: Lower edge of left hand locking plate must insert over right hand locking plate.)
7. Lock wheelclamp by rotating the key 90 degrees anti-clockwise, and then remove your key.



8. To remove your Milenco wheelclamp release lock by rotating key, squeeze both legs together to release locking mechanism then reverse the above instructions.

Please note: On the keys there is a number, please make a note of this number this will ensure that in the event of the keys being misplaced a new set of keys can be ordered.