

# MILENCO

## 2066 / 5258 Security Handrail

THINK READ PLAN




1. Use Gasket to mark drill position.

2. Drill 2 x 4 holes (7mm diameter)



3. Mount 2 inside backing plates and insert 8 screws.

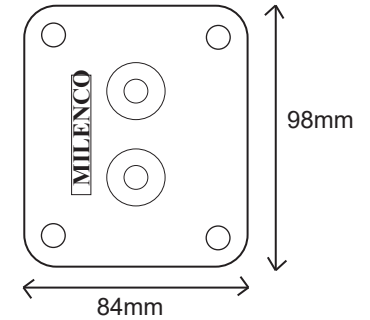

4. Fit 2 Gaskets and then tighten 8x M6 screws.



5. Fit 2x trim cover plates (mounting cover W 90mm x H 105mm)



*Handrail Frame mounting kit has to be purchased separately  
Requires a minimum gap of 5mm between door and frame.*