


# MILENCO

## Fitting/ Operating Instructions - Super Heavy Duty 3004 Hitchlock (product code: 2004)



1. Ensure stabiliser red handle is in upright position and the black handle is in the down position.

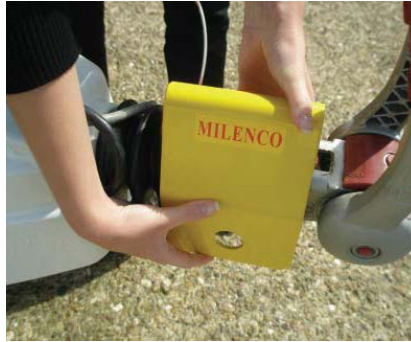

2. Place the body of hitch lock over the black handle ensuring it is located into the slot in the inside top corner of the hitch lock.



3. Place the bolt through the hole on the hitch lock body



4. Push the 2 sections of the locking bolt together



5. Turn the key to lock the mechanism



6. The hitch is now secure